

DSTV SETTINGS FOR HD PVR DECODERS ON A ONE CABLE SYSTEM

Using the remote of the Dstv, press MENU then
Go to ADVANCED OPTIONS – press OK
Pin code 9949
Go to NETWORK SETUP press OK

Home Network Dstv IS20 - remains as is
(Frequency should be **11594** and Symbol rate **27500** – **do not change these**)
Press P+ button on the remote to access new networks.

Additional Network 1 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **11210**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 2 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **11250**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 3 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **11290**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 4 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **11330**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 5 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **11370**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 6 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **11410**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+



Additional Network 7 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **10930**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 8 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **10890**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Change FEC to 2/3
Change Modulation to 8PSK
Press P+

Additional Network 9 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **10850**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Change FEC to 2/3
Change Modulation to 8PSK
Press P+

Additional Network 10 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **10810**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 11 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **10770**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Change FEC to 2/3
Change Modulation to 8PSK
Press P+

Additional Network 12 Dstv IS20

Go to FREQUENCY
Left key to remove numbers, then enter **10730**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Press the yellow button on the remote.

If this did not help, then do a FLASH CLEARING and redo above steps.
Should you experience further problems, please contact your body corporate delegate.